


Genuine Accessories Installation Instructions


Part Number: 0000-8L-K01

Fender Strakes

Applicable Models: 2004>RX8

Package Contents

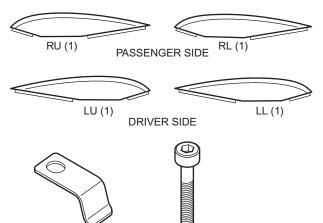

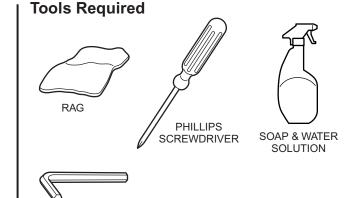


1 Preparation of Vehicle

RETAINER (4)

1. Turn steering wheel so the wheel is turned outward on the side you are installing the strakes on.


M4 BOLT (4)


- 2. Using a Phillips screwdriver, remove (4) plastic scrivets in the position as shown in Figure 1. Remove bottom of splash guard. Save for re-assembly.
- 3. Put your hand between the inner fender and fender panels and remove grille from backside by squeezing clips. Clip position is referred to in Figure 2.

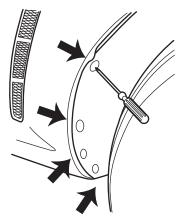


3mm ALLEN WRENCH



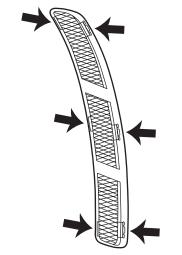

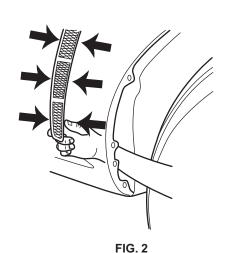


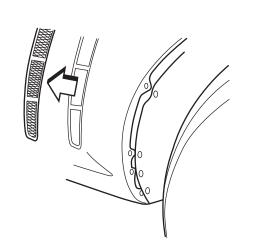


Pre-assembly of Fender Strakes 1. Clean fender area using soft cloth, soap and water. 2. For the upper strake, insert the diamond locator

For the upper strake, insert the diamond locator (back side of strake) in the slot second row from the bottom, third from the front side. Figure 1.


- 3. Assemble the strake grille and strake with bolt and retainer through chosen slots. Be sure to identify the fender strakes by the ID stamp on the bottom. Figure 3. Do not completely tighten. Keep retainers in upward position.
- 4. For the lower strake, insert the diamond locator in the slot second row from the bottom, first diamond from the front side. Figure 2.

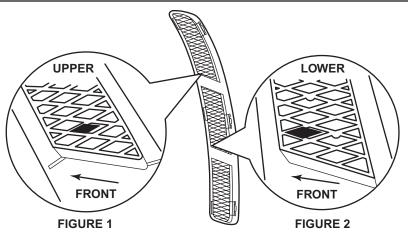

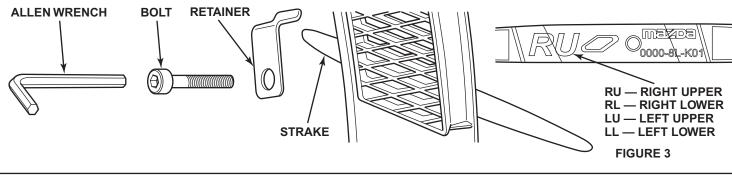

Final Assembly of Grille to Vehicle

- Snap grille back into vehicle fender. Make sure all 6 clip positions snap in position (shown in Step 1, Figure 2.)
- Reach your hand into fender well (shown in Step 1, Figure 2) and rotate clips in downward position. Using allen wrench, tighten screws completely until snug.
- 3. Repeat step 1, 2, and 3 for opposite side grille.

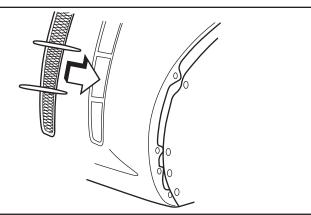

4 Final Assembly

- 1. Reassemble fender well using (4) plastic scrivets removed in Step 1. Figure 1.
- 2. Confirm strakes are flush to grille and conforms to vehicle's sheet metal
- 3. Wipe vehicle and strakes of any fingerprints, using soft cloth.

